


# PKK 800


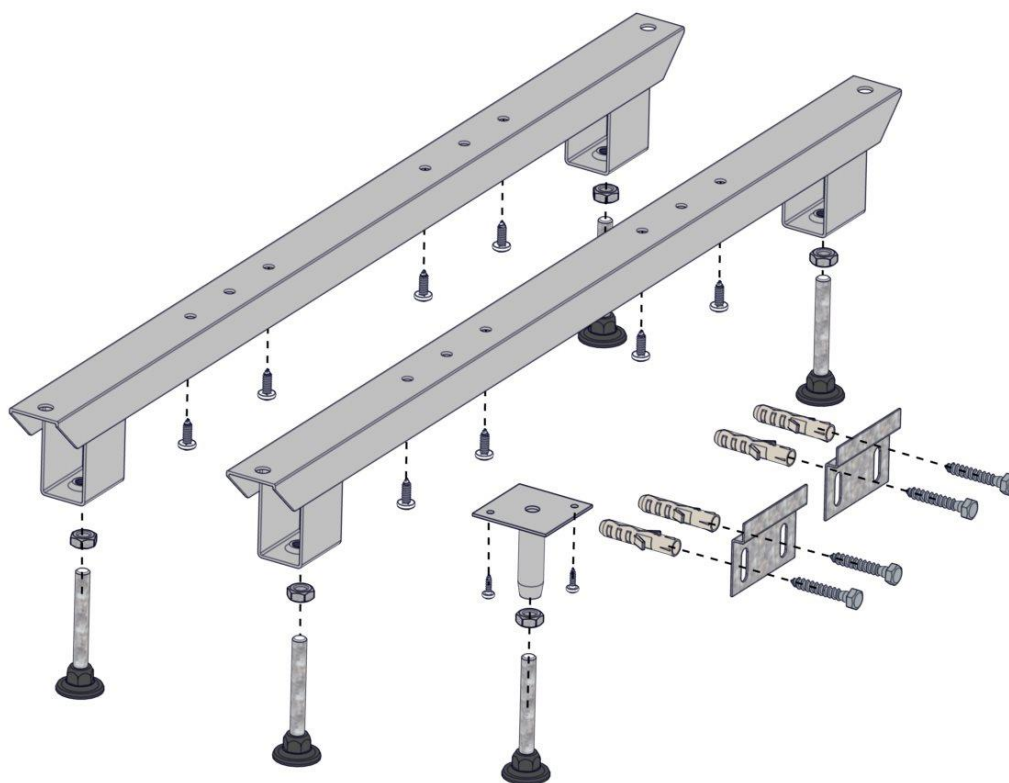


PDF




- SI** Podnožje kopalne kadi PKK 800 – navodilo za montažo
- HR** Podnožje za kadu PKK 800 – upute za montažu
- SRB** Podnožje za kadu PKK 800 – uputstvo za montažu
- MK** Подножје на када PKK 800 – упатства за монтажа
- RU** Основание ванны PKK 800 – инструкция по монтажу
- UA** Основа для ванни PKK 800 – інструкція зі збирання
- HU** PKK 800 fürdőkádtalp – összeszerelési útmutató
- RO** Bază PKK 800 pentru cadă de baie – instrucțiuni de asamblare
- GB** PKK 800 bathtub base – assembly instructions
- DE** PKK 800 Wannenfüße – Aufbauanleitung
- IT** Base vasca da bagno PKK 800 – istruzioni di montaggio
- FR** Support pour baignoire PKK 800 – instructions de montage




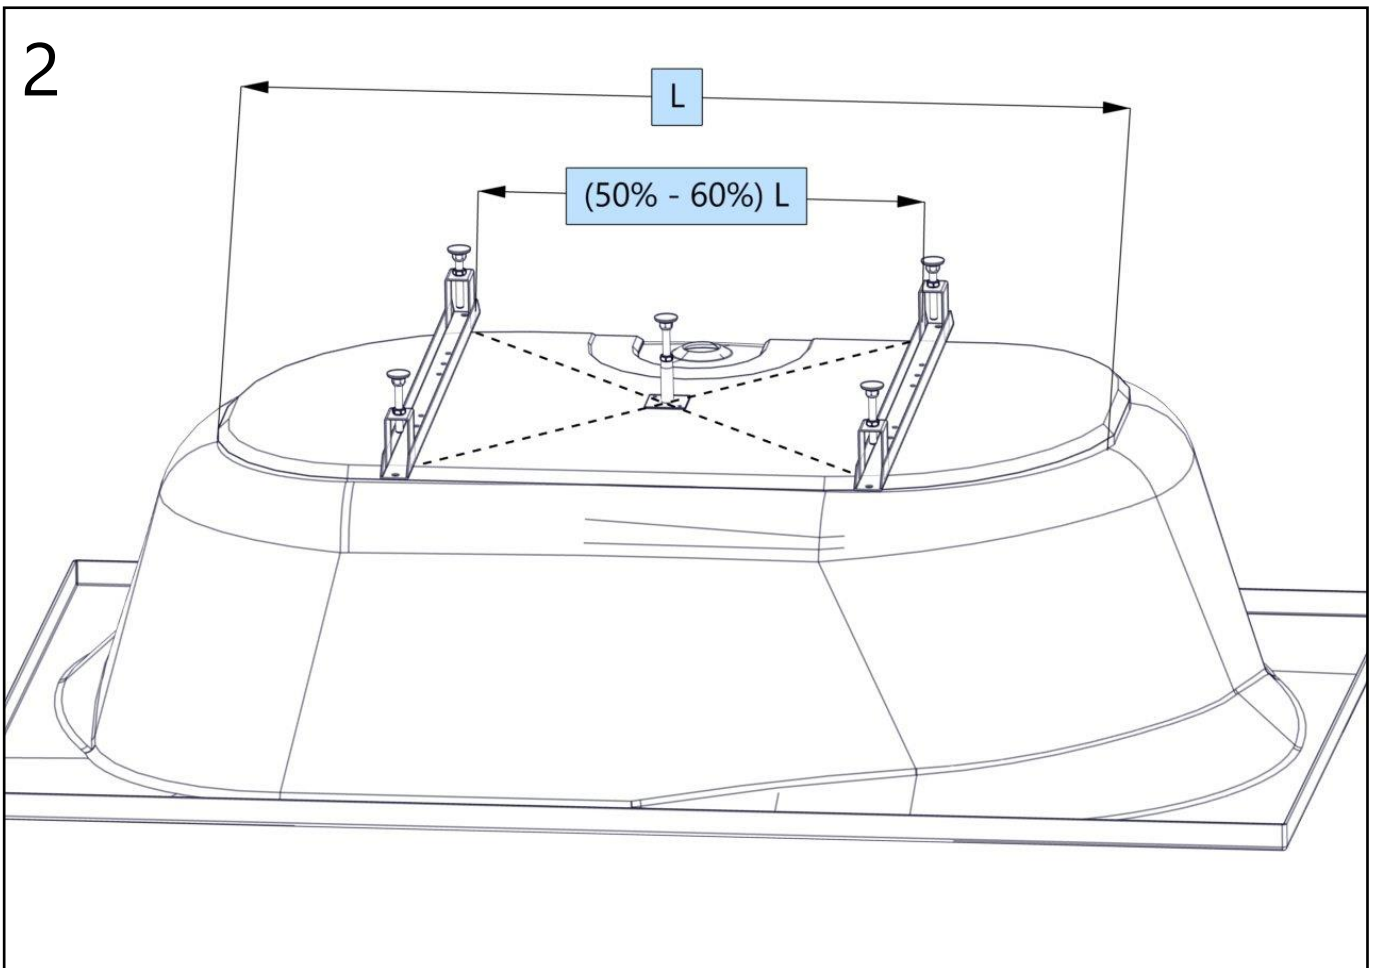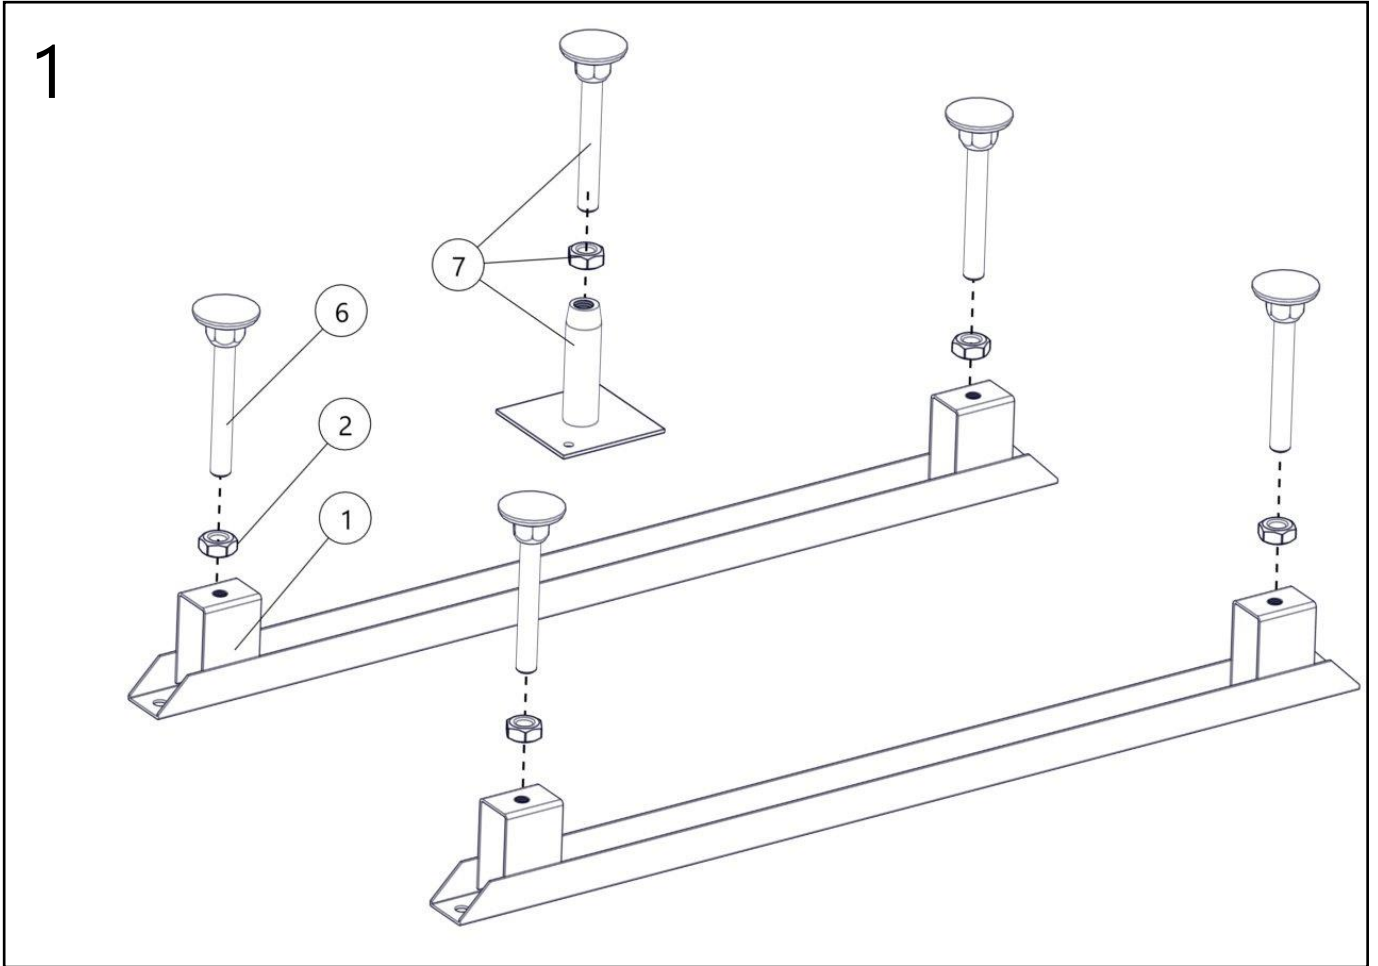


**NABUCCO 190x120**

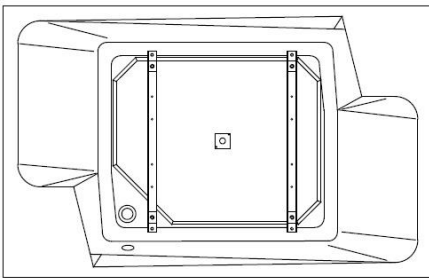


**CHAD 170x120**

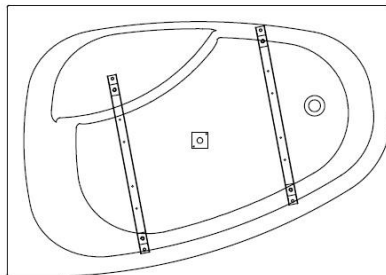


**SAMSON 180x160**  
(2x PKK 800)

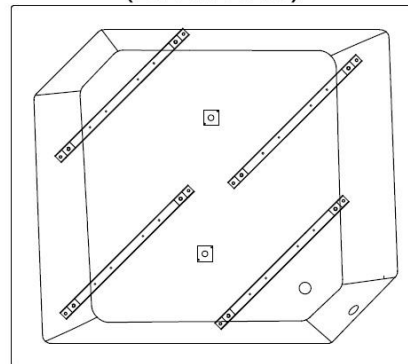


**OPERA Ø180**

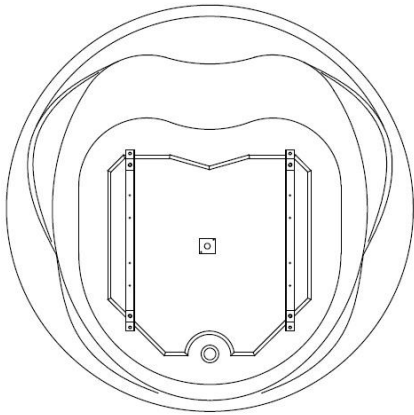



**ADAM & EVA 195x125**

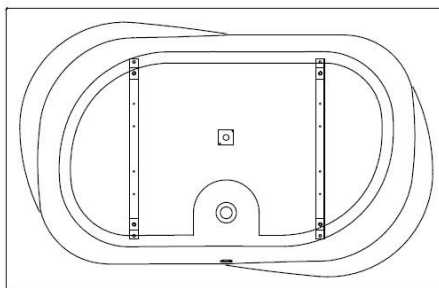


**NORMA 190x95**

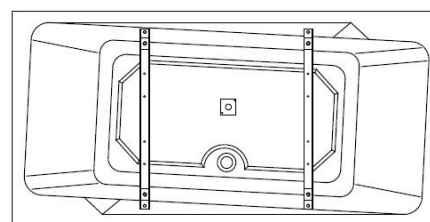




3

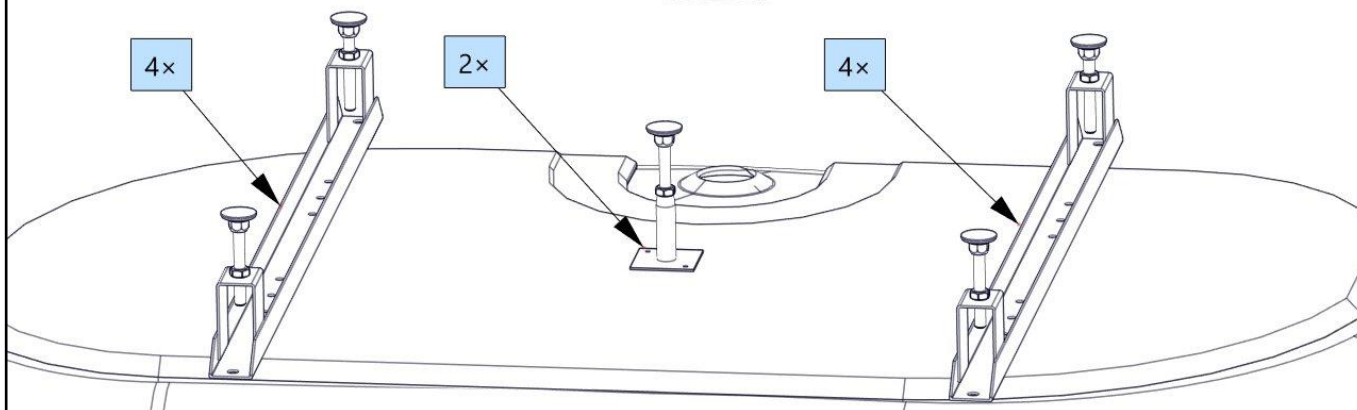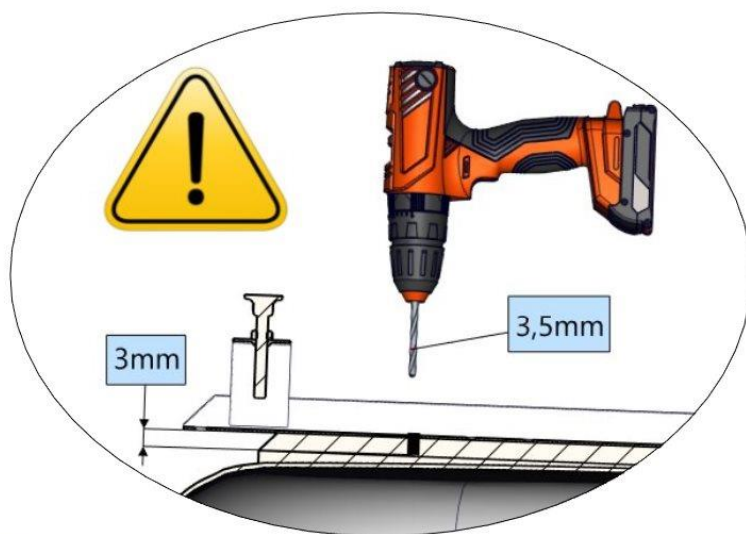


4

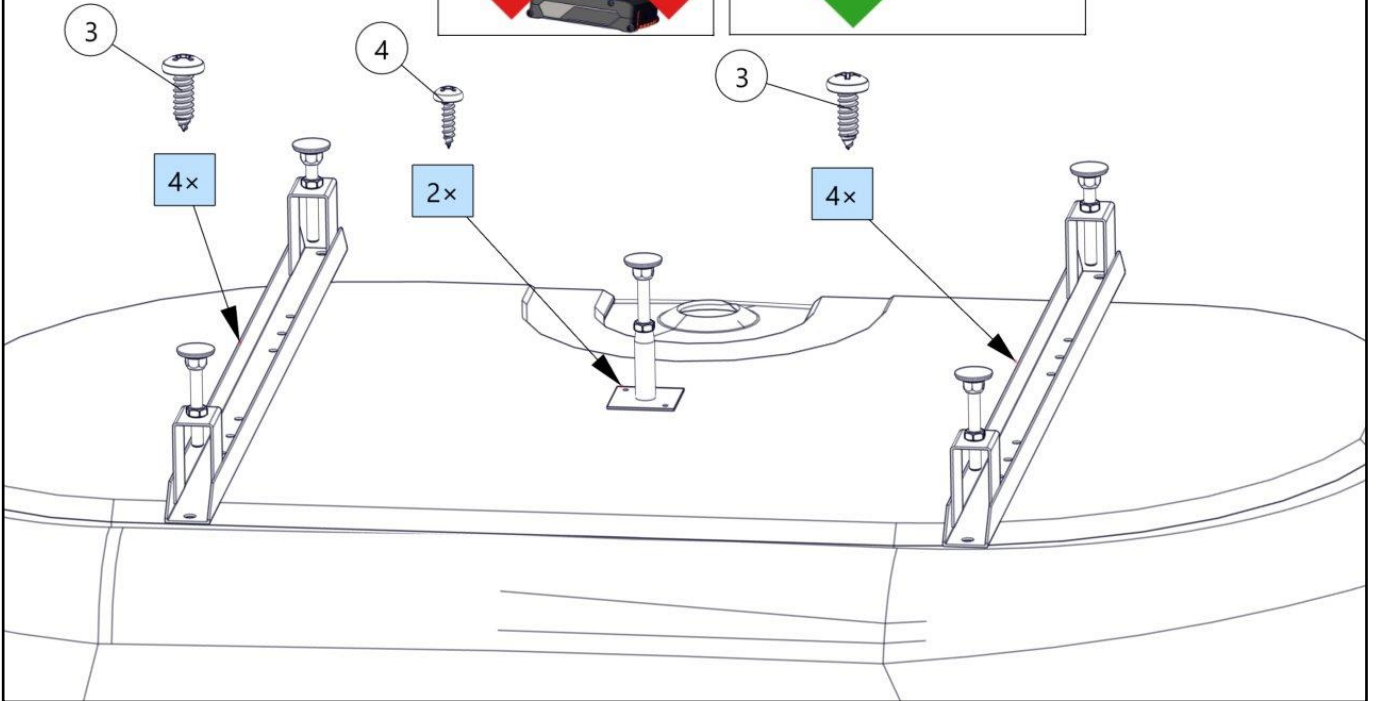


5

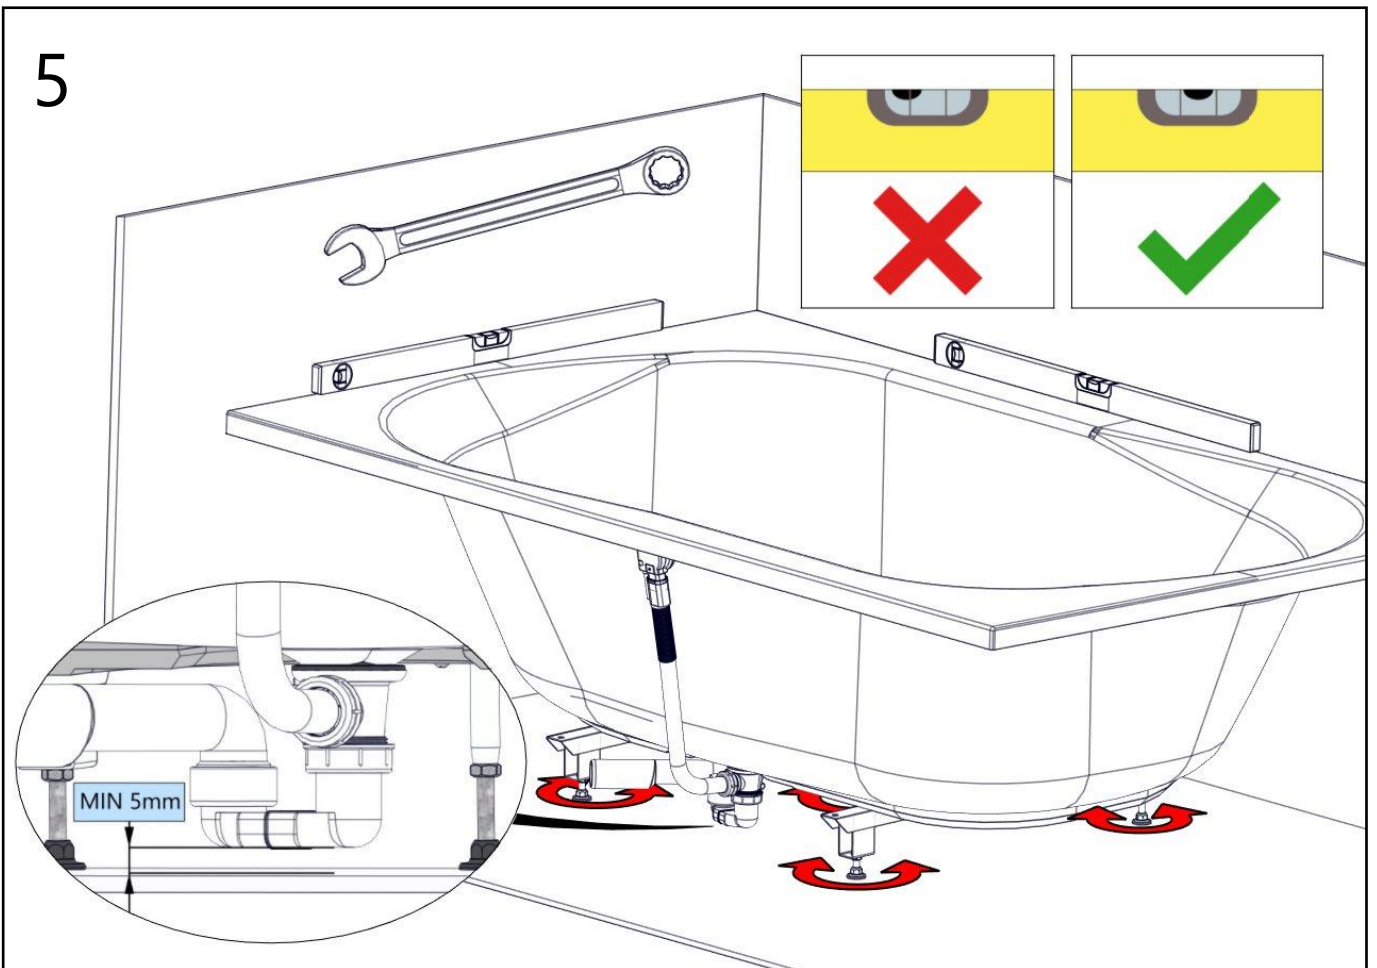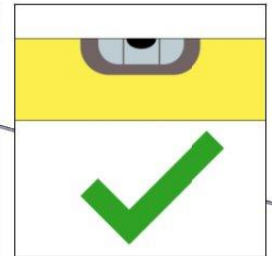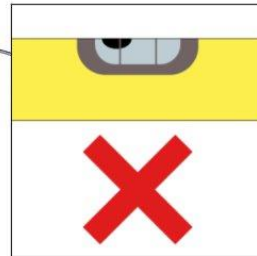



6

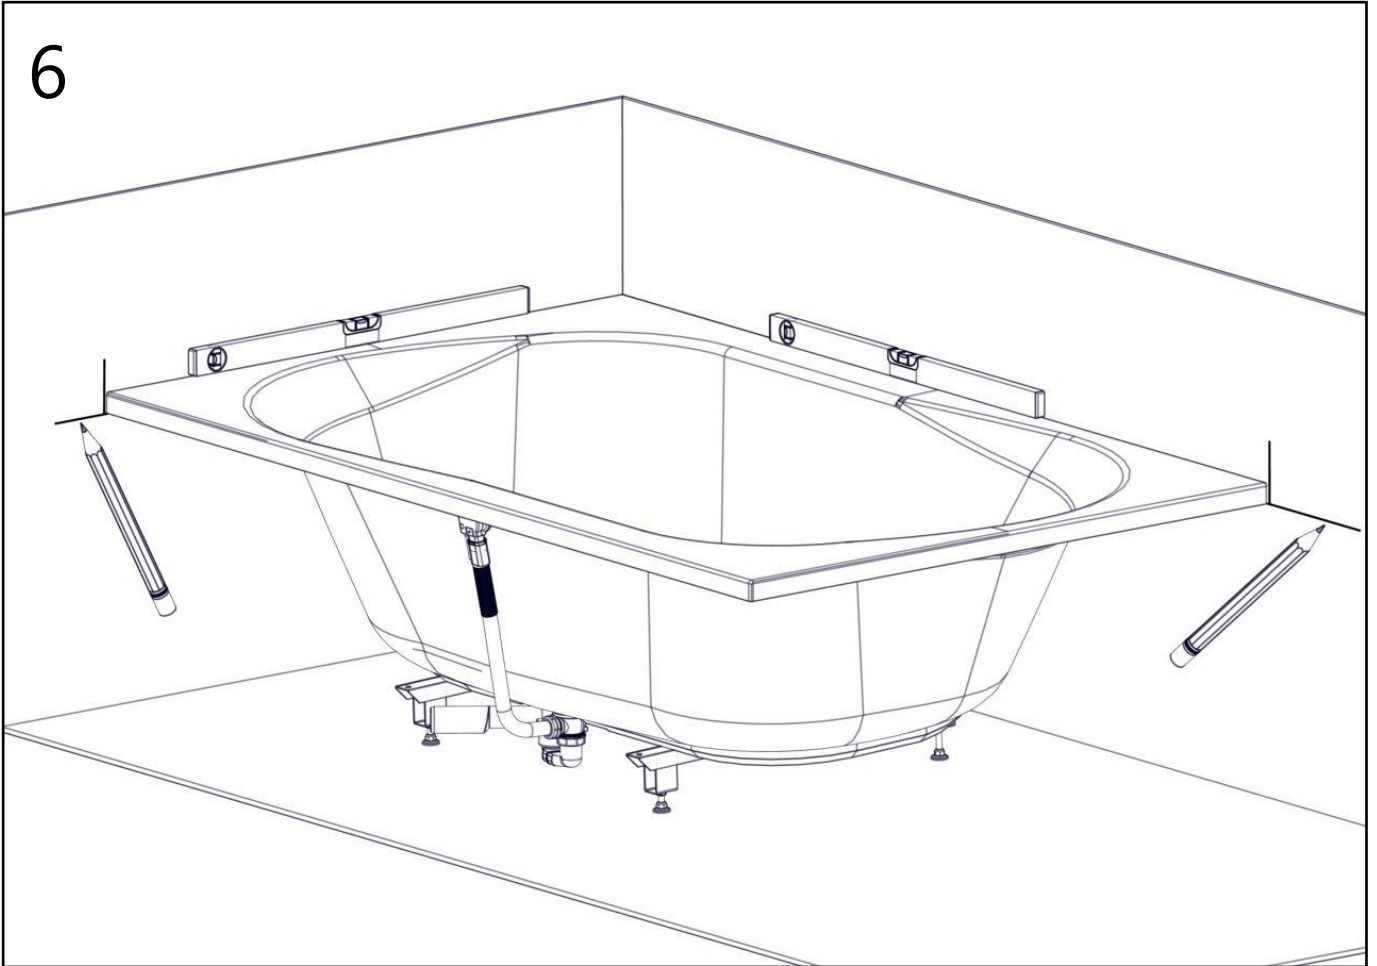

7

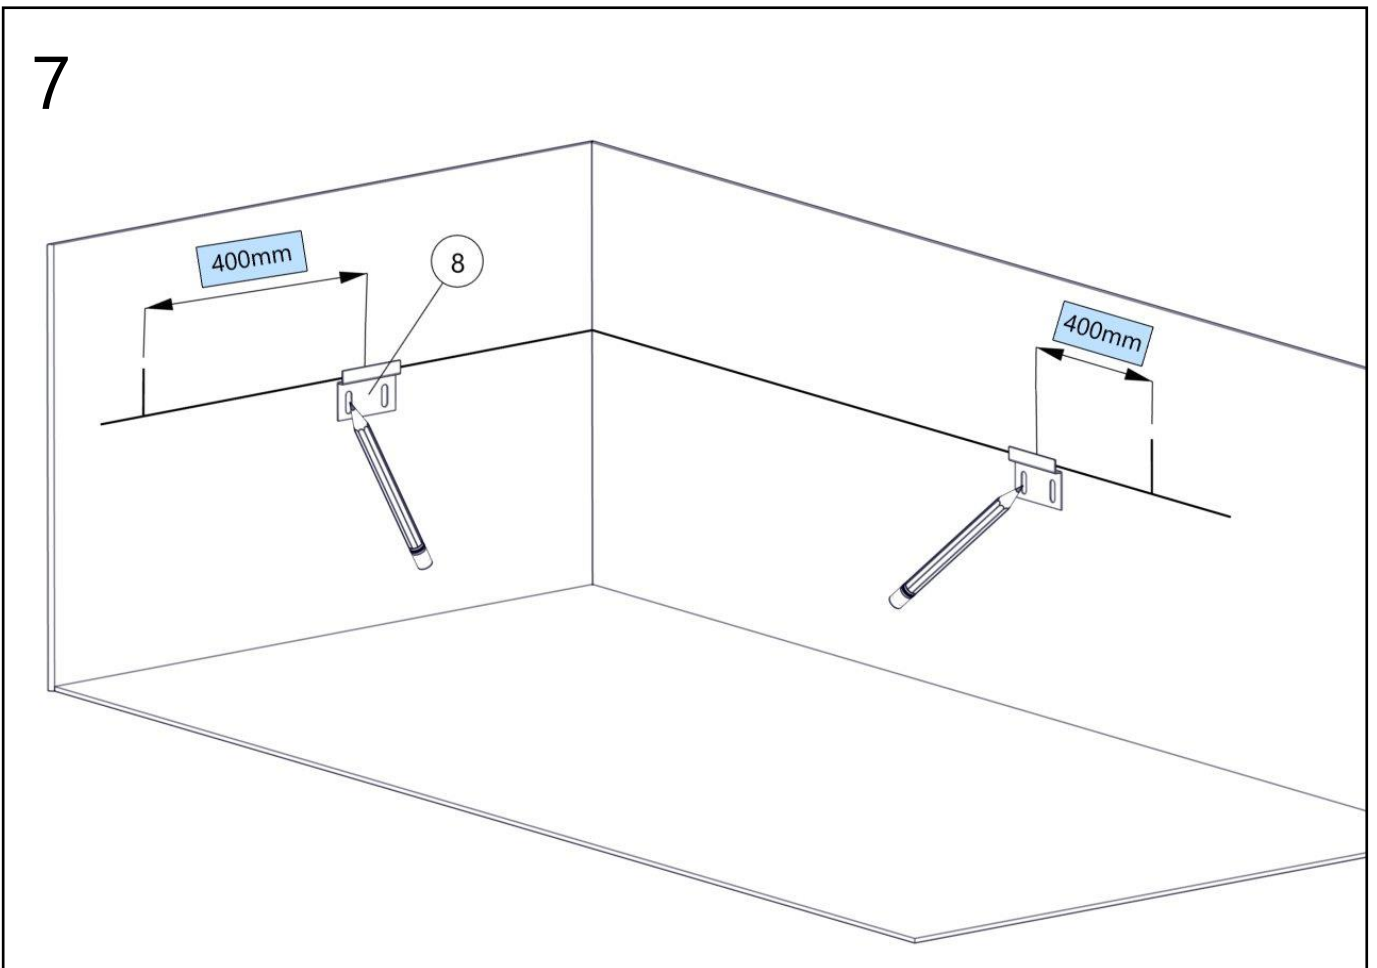

8

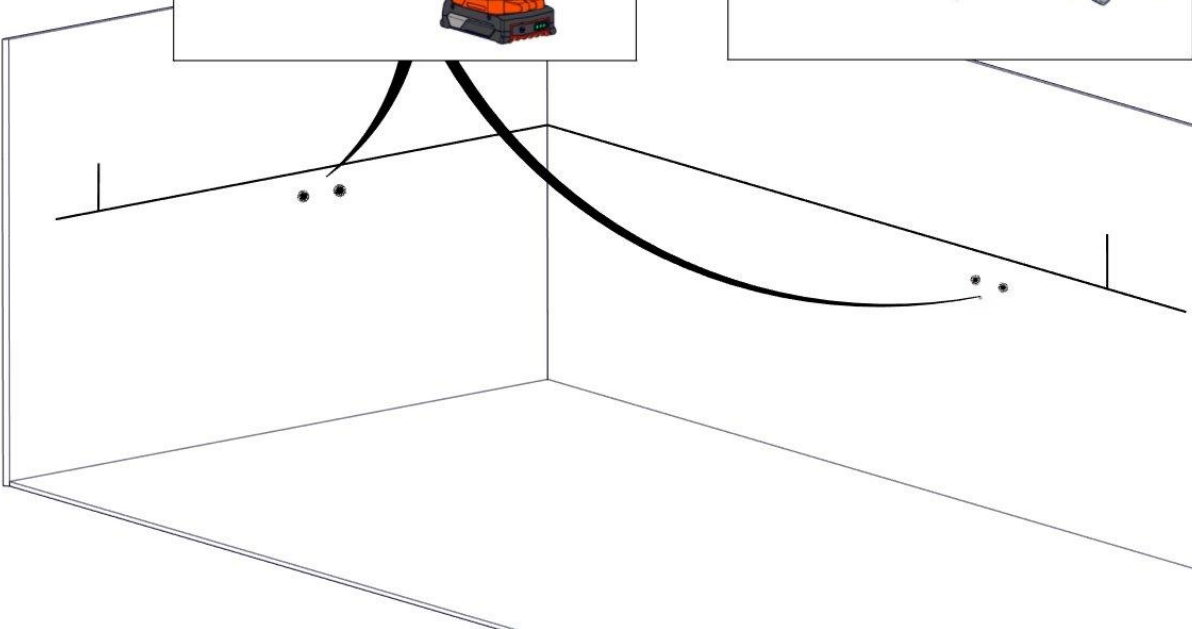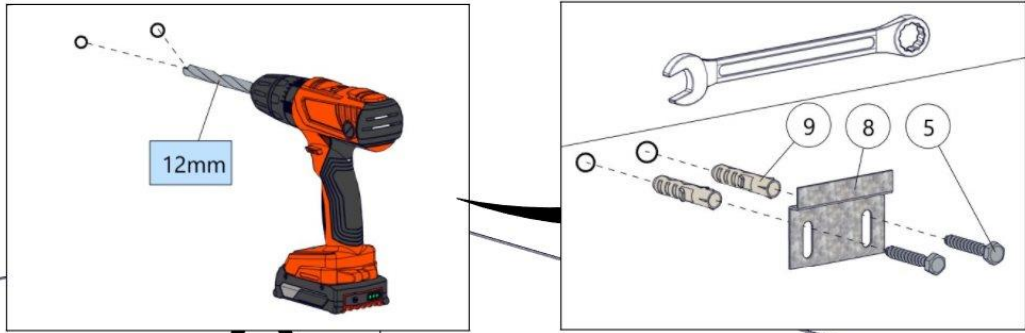

9

